

Extended Warranty

Available in U.S. only. Extend your warranty for an additional 4 years from date of purchase for \$5. You can pay with AMEX, Discover, Visa or MasterCard by calling 1-800-448-4639 during normal business hours. Payment must be made within 30 days of purchase. Name, address, telephone number, purchase date, and 5-digit model number required. You can also mail a check for \$5 to: Timex Extended Warranty, P.O. Box 1676, Dept. EF, Little Rock, AR 72203.

Water Resistance/Étanchéité/Resistente al agua/Resistência à água/Impermeabilità/Wasserbeständigkeit/Waterbestendigheid/耐水性 / 防水

If your watch is water-resistant, meter marking or () is indicated. (See fig.1)

Water-Resistance Depth Profundidad d'étanchéité Profundidad de resistencia à agua Profondità di impermeabilità Tiefe der Wasserbeständigkeit Waterbestendigheid diepte 耐水性深度 防水深度	p.s.i.a.* Water Pressure Below Surface Presión de l'eau sous la surface en p.s.i.a.* Presión del agua subsuperficie en p.s.i.a.* Pressão debaixo de água – p.s.i.a.* Pression équivalente exprimée en p.s.i.a. p.s.i.a.* Wasserdruk unterhalb der Oberfläche p.s.i.a.* Waterdruk onder het wateroppervlak p.s.i.a.* 水面下水压 * 水下壓力 p.s.i.a.
30m/98ft	60
50m/164ft	86
100m/328ft	160

*pounds per square inch absolute
*livres par pouce carré absolus
*Presión absoluta en libras pulgada2
*ibras por polegada quadrada –
pressão absoluta
*libbre assolute per pollice quadrato

WARNING: TO MAINTAIN WATER-RESISTANCE, DO NOT PRESS ANY BUTTONS UNDER WATER.
1. Watch is water-resistant only as long as lens, push buttons and case remain intact.
2. Watch is not a diver watch and should not be used for diving.
3. Rinse watch with fresh water after exposure to salt water.

Si la montre est étanche, la prof. max. ou le symbole () est indiqué. (Voir Fig. 1)
MISE EN GARDE : POUR GARDER L'ÉTANCHEITÉ, N'ENFONCEZ AUCUN POUSSOIR SOUS L'EAU.

1. Étanche seulement si le verre, poussoir et boîtier restent intacts.
2. Pas conçue pour la plongée. Ne pas utiliser dans ces conditions.

3. Rincer à l'eau douce après tout contact avec l'eau de mer.

Si su reloj es resistente al agua, se indicarán los metros o aparecerá el símbolo (). (Ver fig. 1)

ADVERTENCIA: PARA QUE EL RELOJ SEA RESISTENTE AL AGUA, NO OPRIMA NINGÚN PULSADOR DEBAJO DEL AGUA.

1. El reloj es resistente al agua solamente si el cristal, los pulsadores y la caja permanecen intactos.

2. El reloj no es un reloj para buzos y no debe usarse para submarinismo.

3. Enjuague el reloj con agua dulce en caso de exposición al agua salada.

Se o seu relógio for resistente à água, o número de metros de profundidade ou o símbolo () estará indicado. (Ver a Fig. 1)

AVERTIMENTO: PARA SALVAGUARDAR L'IMPERMEABILITÀ DELL'OROLOGIO, NON PREMERE ALCUN PULSANTE SOTT'ACQUA.

1. L'orologio è impermeabile purché il cristallo, i pulsanti e la cassa siano intatti.

2. L'orologio non è subacqueo e non va usato per le immersioni.

3. Sciacquare con acqua dolce dopo l'esposizione all'acqua marina.

W-9 814-095006

www.timex.com

TIMEX

Wenn Ihre Uhr wasserbeständig ist, ist eine Meternarke oder () angegeben. (Vgl. Bild 1)
WARNUNG: DAMIT IHRE UHR WASSERBESTÄNDIG BLEIBT, DRÜCKEN SIE UNTER WASSER KEINE KNOPFEN.

1. Die Uhr ist nur dann wasserbeständig, wenn Glas, Knöpfe und Gehäuse unversehrt sind.

2. Die Uhr ist keine Taucheruhr und sollte nicht beim Tauchen verwendet werden.

3. Waschen Sie die Uhr, nachdem sie im Salzwasser war, mit Leitungswasser ab.

Indien uw horloge waterbestendig is, wordt dat aangeduid door een meternarkeing of (). (Zie fig. 1)

WAARSCHUWING: OM DE WATERBESTENDIGHEID TE BEHOUDEN, MAG U ONDER WATER NIET OP EEN KNOOP DRUKKEN .

1. Het horloge is alleen waterbestendig zolang de lens, de Crown (kroon) en de behuizing intact blijven.

2. Het horloge is geen duikershorloge en mag niet worden gebruikt bij het duiken.

3. Spoel het horloge met drinkbaar water nadat het aan zout water werd blootgesteld.

耐水性の時計には、メートル数または()が刻印されています。(図1参照)。

警告：耐水性を維持するため、水中ではボタンを押さないで下さい。

1. 腕時計の耐水性は、盤面ガラス、リュウズ、ケースが無傷である場合に限り保たれます。

2. この腕時計はハイバーウォッチではありません。タイピングには使用しないで下さい。

3. 腕時計に塩水がかかった後は真水ですいで下さい。

如果您的手錶是防水型，上面有防水深度數字或()標記。(見圖1)
警告：為了保持防水功能，在水下時，不要按壓任何按鈕。

1. 手錶的鏡面玻璃、按鈕和錶殼必須完整無損，才能保持防水功能。

2. 此手錶不是潛水錶，不可用於潛水作業。

3. 手錶若接觸鹽水，應及時用清水沖洗。

THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS. YOU MAY ALSO HAVE OTHER RIGHTS WHICH VARY FROM COUNTRY TO COUNTRY AND STATE TO STATE. IN THE U.K., NOTHING IN THIS WARRANTY WILL AFFECT YOUR STATUTORY RIGHTS.

To obtain warranty service, please return your watch to Timex, one of its affiliates or the Timex retailer where the watch was purchased, together with a completed original Watch Repair Coupon or, in the U.S. and Canada only, the completed original Watch Repair Coupon or a written statement identifying your name, address, telephone number and date and place of purchase. To cover Timex' cost of returning the watch to you (this is not a repair charge), please include with your watch a US\$ 7.00 check or money order in the U.S., a \$6.00 cheque or money order in Canada and a UK £2.50 cheque or money order in the U.K. In other areas, Timex may charge you for postage and handling. NEVER INCLUDE A SPECIAL WATCHBAND OR ANY OTHER ARTICLE OF PERSONAL VALUE IN YOUR SHIPMENT.

For U.S. users, please call 1-800-448-4639 for additional warranty information. For Canada, call 1-800-263-0981. For Brazil, call 0800-168787. For Mexico, call 91-800-01-060. For Central America, the Caribbean, Bermuda and the Bahamas, call (501) 370-5775 (U.S.). For Asia, call 852-2815-0091. For the U.K., call 44 181 754 9494. For Portugal, call 35 1 295 22 57. For France, call 33 3 81 63 42 00. For Germany, call 49 7 231 494140. For the Middle East and Africa, call 971-4-310850. For other areas, please contact your local Timex retailer or Timex distributor for warranty information. In Canada, the U.S. and in certain other locations, participating Timex retailers can provide you with a postage-paid, pre-addressed Watch Repair Mailer for your convenience in obtaining factory service.

Basic Operations/Utilisation de base/Operaciones básicas/Operações básicas/Funzionamento generale/Grundfunktionen/Basisfunktionen/基本操作 / 基本使用方法



- 1** Increase/Augm./Aumentar/Aumentar/Più/Erhöhen/Toename/増加 / 選増 Recall/Rappel/Volver a ver/Evocar/Richiamar/Erneuter Abrut/Oproepen/呼び出し / 複查
- 2** Set/Régler/Regular/Imposta/Einstellen/Instellen/セット / 設定
- 3** Next/Suiv./Próximo/Siguiente/Succ./Weiter/Volgende/ 次へ / 下一步 Start-split/Dép.-Intern./Comenzar-fracción/Ligar-tempo repartido/Avvio tempo multi./Start-Teilstrecke/Starten-Tussentijd/スタート—スプリット / 開始—Split Lap/Intern./Volta/Volta/Tempi parz./Runde/Ronde/Lap/
- 4** Decrease/Dimin./Diminuir/Diminuir/Meno/Senken/ Afname / 減少 / 減減 Stop-reset/Arrêt-rem. zéro/Parar-recon/Parar-restablecer/Stop-Ripristina/Stop-neu einstellen/Stoppen-Terugstellen/ストップ / リセット / 停止—重設 Store/clear/Garder-eff./Guardar-borrar/Armazenar-apagar/Memoriza-Annulla/Aufbewahren-Zurücksetzen (clear)/Opslaan-Wissen 保存—クリア / 記憶—清除
- 5** Change mode/Chang. mode/Cambiar modalidad/Alterar o modo/ Cambia mod./Umstellungsfunktion/Modus wijzigen/モード変更/改變模式 Back/Retour/Retroceder/Recuo/Prev./Terug/前に戻る/上一步
- 6** INDIGLO® night-light/Veilleuse INDIGLO®/Luce notturna INDIGLO®/Nachtlicht/INDIGLO® nachverlichting/INDIGLO® ナイトライト / INDIGLO® 夜光顯示

INDIGLO is a registered trademark of Indiglo Corporation in the U.S. and other countries.

INDIGLO® night-light/Veilleuse INDIGLO®/night-light/Luz nocturna INDIGLO®/Luce notturna INDIGLO®/Nachtlicht/INDIGLO® nachverlichting/INDIGLO® ナイトライト / INDIGLO® 夜光顯示

- 6** INDIGLO® night-light on-off/Veilleuse INDIGLO® all./éteinte/Luz nocturna INDIGLO® encender/apagar/Luz nocturna INDIGLO®—jugar/desligar/ Luce notturna INDIGLO® On/Off/INDIGLO® Nachtlicht an/aus/ INDIGLO® nachverlichting aan/uit/INDIGLO® ナイトライトのオン/オフ/ INDIGLO® 夜光顯示「開」或「關」
- 6.11** NIGHT-MODE® Feature on/off/Fonction NIGHT-MODE®/Activación/désact./Característica NIGHT-MODE®/encender/apagar Característica/NIGHT-MODE®—jugar/desligar/NIGHT-MODE® On/Off/NIGHT-MODE®-Funktion an/aus/ NIGHT-MODE® eigenschaftschaar-auf-/NIGHT-MODE®機能のオン/オフ/ NIGHT-MODE® 夜間模式「開」或「關」

- 6.3 sec** Alternative/Alternativa/Alternativa/Alternativa/ Alternative/Alternatif/ 切替可能 交替顯示

NIGHT-MODE® Feature/Fonction NIGHT-MODE®/Función NIGHT-MODE®/Caratteristica NIGHT-MODE®/NIGHT-MODE®-Funktion/ NIGHT-MODE® eigenschaft/NIGHT-MODE® 機能 / NIGHT-MODE® 功能

- 6** 12:08:52 12:08:52 SAT T-1 3 sec* 12:08:52 12:08:52 SAT T-1

Alternative/Alternativa/Alternativa/Alternativa/ Alternative/Alternatif/ 切替可能 交替顯示

5 Modes/Modos/Modos/Modalità/Funktionen/Modi/モード / 模式

- 5** Chrono Elapsed time/Temps écoulé/Tiempo transcurrido/Tempo decorrido/Tempo trascorso/Verstrichene Zeit/Verstreken tijds/経過時間/已過時間
- 5.5** Timer Countdown timer/Compte à rebours/Cuenta regresiva/Contador do conteúdo decrescente/Conto alla rovescia/Countdown-Timer/Affellende timer/カウントダウンタイマー / 倒數計時器
- 5.5.5** Alarm Alarm set/Régler/alarma/Fijar alarma/Despertador regulado/Imposta allarme/Wekereinstellung/Alarm instellen/アラームセット / 鬧鐘設定
- 5.5.5.5** Memo Memo/Mémor/Memo/Memorando/Appunto/Memo/メモ / 提示

6 Time-Date/Hora-Fecha/Hora-Data/Ora-Data/Zeit-Datum/Tijd-Datum/時刻—日付 / 時間と日期

- YY-MM-DD AM/PM PM GDS 12:09:36 Chime on Timer on Alarm on Hr/Min/Sec SAT T-1 Time Zone T-1/T-2

YY-MM-DD AM/PM PM GDS 12:09:36 Chime on Timer on Alarm on Hr/Min/Sec SAT T-1 Time Zone T-1/T-2

YY-MM-DD AM/PM PM GDS 12:09:36 Chime on Timer on Alarm on Hr/Min/Sec SAT T-1 Time Zone T-1/T-2

YY-MM-DD AM/PM PM GDS 12:09:36 Chime on Timer on Alarm on Hr/Min/Sec SAT T-1 Time Zone T-1/T-2

YY-MM-DD AM/PM PM GDS 12:09:36 Chime on Timer on Alarm on Hr/Min/Sec SAT T-1 Time Zone T-1/T-2

YY-MM-DD AM/PM PM GDS 12:09:36 Chime on Timer on Alarm on Hr/Min/Sec SAT T-1 Time Zone T-1/T-2

YY-MM-DD AM/PM PM GDS 12:09:36 Chime on Timer on Alarm on Hr/Min/Sec SAT T-1 Time Zone T-1/T-2

YY-MM-DD AM/PM PM GDS 12:09:36 Chime on Timer on Alarm on Hr/Min/Sec SAT T-1 Time Zone T-1/T-2

YY-MM-DD AM/PM PM GDS 12:09:36 Chime on Timer on Alarm on Hr/Min/Sec SAT T-1 Time Zone T-1/T-2

YY-MM-DD AM/PM PM GDS 12:09:36 Chime on Timer on Alarm on Hr/Min/Sec SAT T-1 Time Zone T-1/T-2

YY-MM-DD AM/PM PM GDS 12:09:36 Chime on Timer on Alarm on Hr/Min/Sec SAT T-1 Time Zone T-1/T-2

YY-MM-DD AM/PM PM GDS 12:09:36 Chime on Timer on Alarm on Hr/Min/Sec SAT T-1 Time Zone T-1/T-2

YY-MM-DD AM/PM PM GDS 12:09:36 Chime on Timer on Alarm on Hr/Min/Sec SAT T-1 Time Zone T-1/T-2

YY-MM-DD AM/PM PM GDS 12:09:36 Chime on Timer on Alarm on Hr/Min/Sec SAT T-1 Time Zone T-1/T-2

YY-MM-DD AM/PM PM GDS 12:09:36 Chime on Timer on Alarm on Hr/Min/Sec SAT T-1 Time Zone T-1/T-2

YY-MM-DD AM/PM PM GDS 12:09:36 Chime on Timer on Alarm on Hr/Min/Sec SAT T-1 Time Zone T-1/T-2

YY-MM-DD AM/PM PM GDS 12:09:36 Chime on Timer on Alarm on Hr/Min/Sec SAT T-1 Time Zone T-1/T-2

YY-MM-DD AM/PM PM GDS 12:09:36 Chime on Timer on Alarm on Hr/Min/Sec SAT T-1 Time Zone T-1/T-2

YY-MM-DD AM/PM PM GDS 12:09:36 Chime on Timer on Alarm on Hr/Min/Sec SAT T-1 Time Zone T-1/T-2

YY-MM-DD AM/PM PM GDS 12:09:36 Chime on Timer on Alarm on Hr/Min/Sec SAT T-1 Time Zone T-1/T-2

YY-MM-DD AM/PM PM GDS 12:09:36 Chime on Timer on Alarm on Hr/Min/Sec SAT T-1 Time Zone T-1/T-2

YY-MM-DD AM/PM PM GDS 12:09:36 Ch

